

MMI with Integrated Bluetooth Cell Phone , (QF1),(QF2)

From September 2014

**Audi**

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

erWin

Information Electronics Control Module 1

- J285 Instrument Cluster Control Module
- J533 Data Bus on Board Diagnostic Interface
- J794 Information Electronics Control Module 1, In the Center Console
- ST4 Fuse Panel 4
- SF7 Fuse 7 (On Fuse Panel F)
- T2aq 2-Pin Connector
- T2aw 2-Pin Connector
- T2bh 2-Pin Connector
- T2bm 2-Pin Connector
- T8f 8-Pin Connector
- T12d 12-Pin Connector
- T17g 17-Pin Connector, In the Left A-Pillar Connector Station, Blue
- T32 32-Pin Connector
- T32b 32-Pin Connector

372 Ground Connection 7 (in Main Wiring Harness)


687 Ground Connection 1 on Center Tunnel

B159 Diagnostic Connection (in Interior Wiring Harness)

B444 OBD Connection 1 (in Main Wiring Harness)

B607 Connection 3 (in Interior Wiring Harness)

* Refer to Applicable Wiring Diagram for Fuse Positions
*2 Fiber Optic Cable

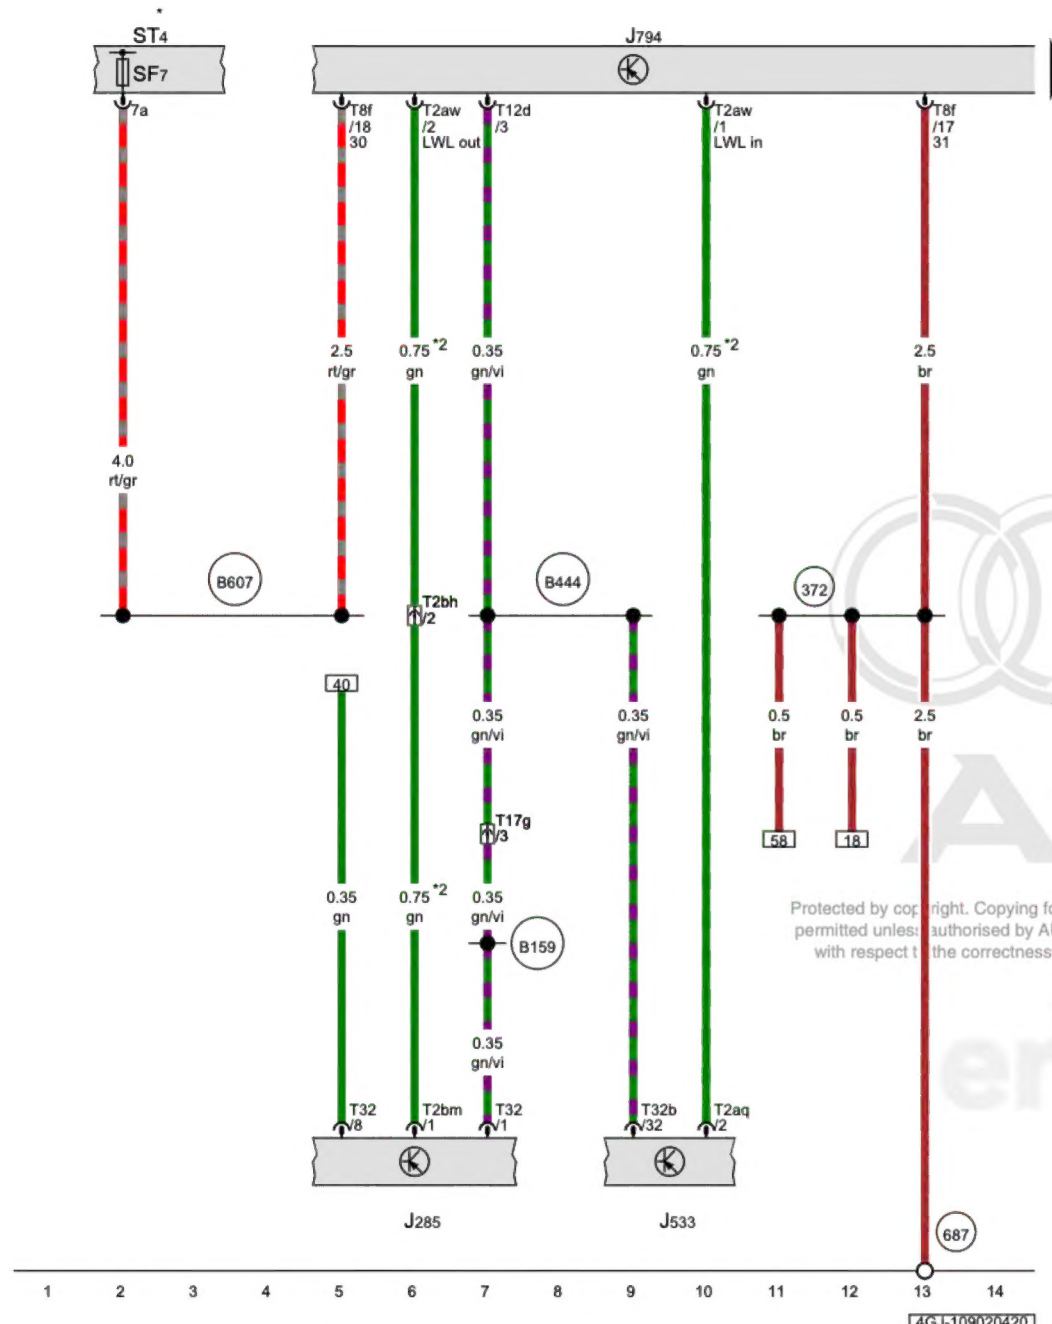

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

Multimedia System Control Head, Information Electronics Control Module 1


- E380 Multimedia System Control Head
- J794 Information Electronics Control Module 1, In the Center Console
- ST3 Fuse Panel 3
- SF3 Fuse 3 (On Fuse Panel F)
- T12d 12-Pin Connector
- T20b 20-Pin Connector

373 Ground Connection 8 (in Main Wiring Harness)

687 Ground Connection 1 on Center Tunnel

B318 Positive Connection 4 (30a) (in Main Wiring Harness)

* Refer to Applicable Wiring Diagram for Fuse Positions
*2 Prompt Wire

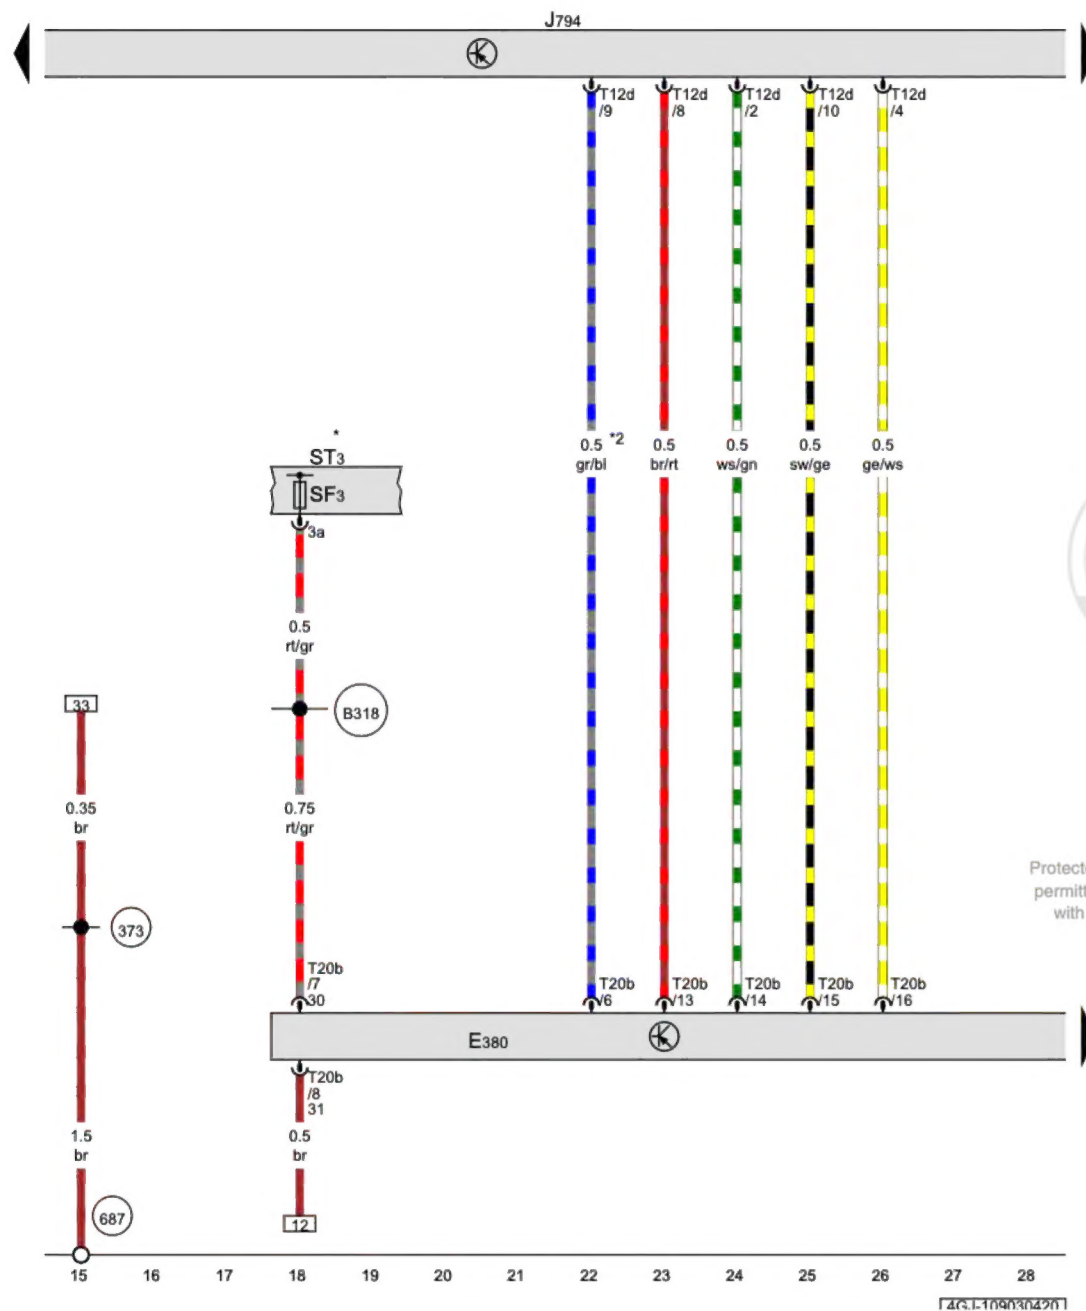

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Multimedia System Control Head, Display Unit Button, Display -Open- Stop Switch, Information Electronics Control Module 1, Display Opening/Closing Motor


- E380 Multimedia System Control Head
- E506 Display Unit Button
- F330 Display -Open- Stop Switch
- F331 Display -Closed- Stop Switch
- J794 Information Electronics Control Module 1, In the Center Console
- T6q 6-Pin Connector
- T8o 8-Pin Connector
- T8p 8-Pin Connector, Behind the Left Front Center Console
- T17h 17-Pin Connector, In the Left A-Pillar Connector Station
- T20b 20-Pin Connector
- V301 Display Opening/Closing Motor

- 45 Ground Connection Behind Instrument Panel, Center
- 199 Ground Connection 3 (in Instrument Panel Wiring Harness)
- 213 Ground Connection (in Instrument Panel Wiring Harness)


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

A175 Connection 58s (in Instrument Panel Wiring Harness)

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

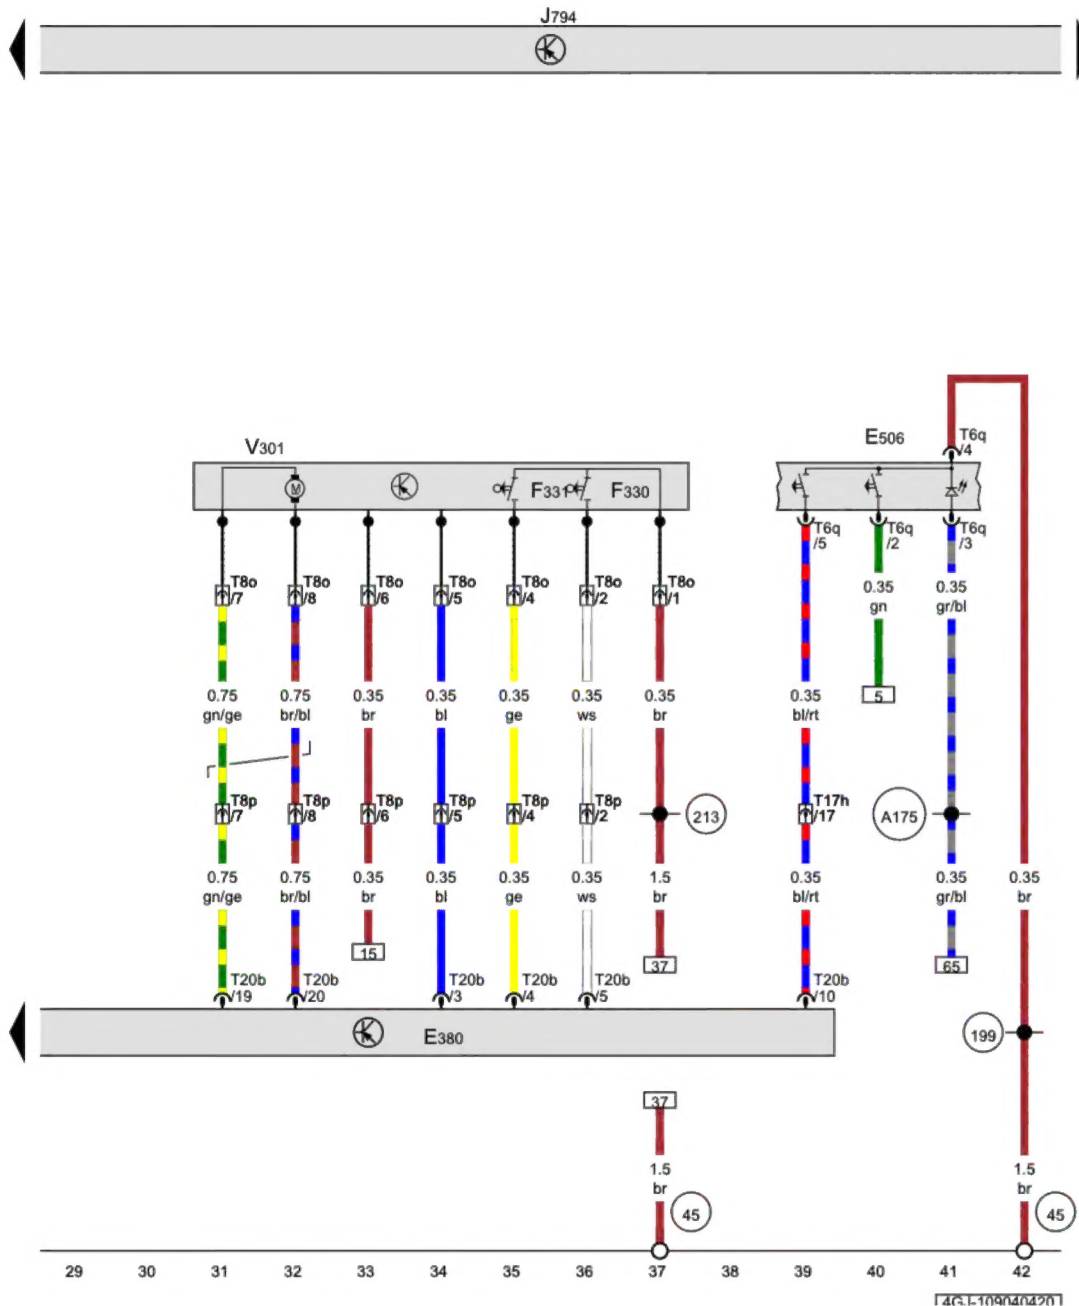

Information Electronics Control Module 1, Microphone Unit in Front Roof Module, Roof Antenna

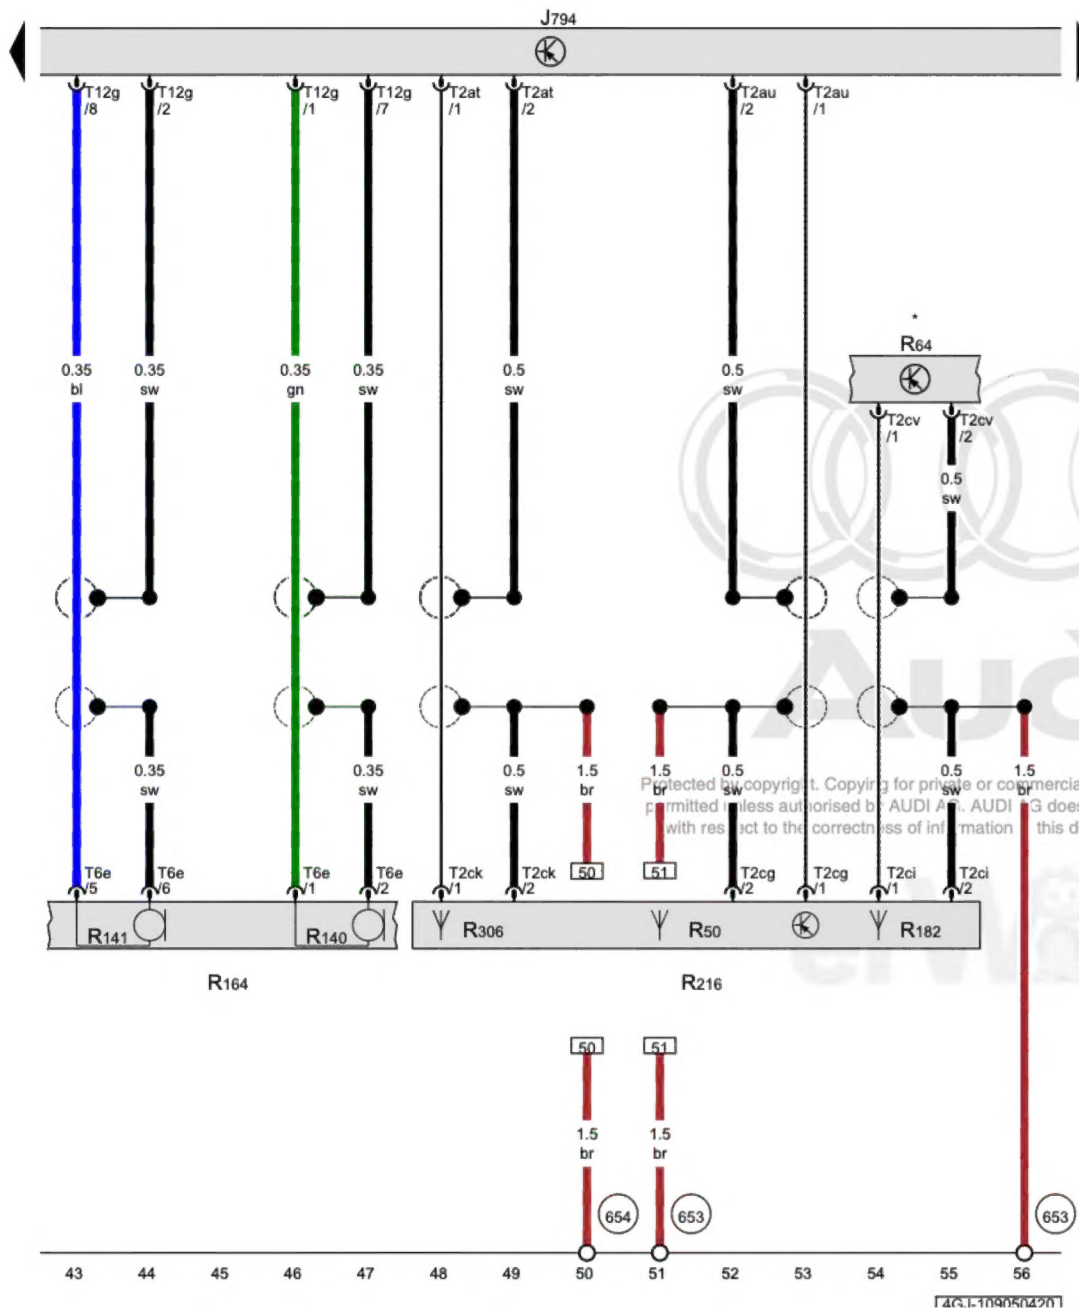


- J794 Information Electronics Control Module 1, In the Center Console
- R50 GPS Antenna
- R64 Parking Heater Radio Receiver
- R140 Left Front Microphone
- R141 Right Front Microphone
- R164 Microphone Unit in Front Roof Module
- R182 Auxiliary Heater Antenna
- R216 Roof Antenna
- R306 LTE Antenna 2
- T2at 2-Pin Connector
- T2au 2-Pin Connector
- T2cg 2-Pin Connector
- T2ci 2-Pin Connector
- T2ck 2-Pin Connector
- T2cv 2-Pin Connector
- T6e 6-Pin Connector
- T12g 12-Pin Connector

653 Ground Connection on Left D-Pillar

654 Ground Connection on Right D-Pillar

* For Vehicles with a Parking Heater

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink



J519	Vehicle Electrical System Control Module
J794	Information Electronics Control Module 1, In the Center Console
R126	Telephone Baseplate
ST2	Fuse Panel 2
SB2	Fuse 2 (On Fuse Panel B)
T5g	5-Pin Connector, Near the Telephone Baseplate
T10t	10-Pin Connector
T12d	12-Pin Connector
T32a	32-Pin Connector
T32c	32-Pin Connector

(B732) Connection 58s (in Main Wiring Harness) 2

* Refer to Applicable Wiring Diagram for Fuse Positions

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink